
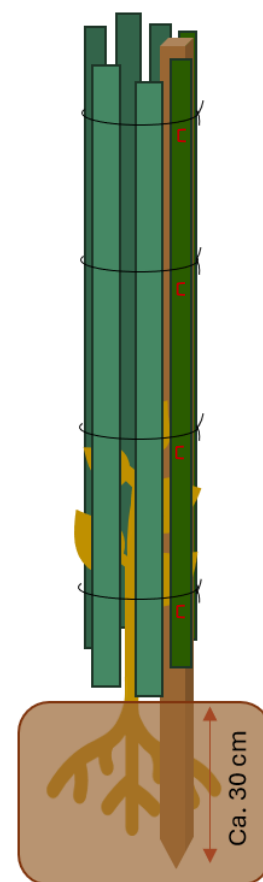
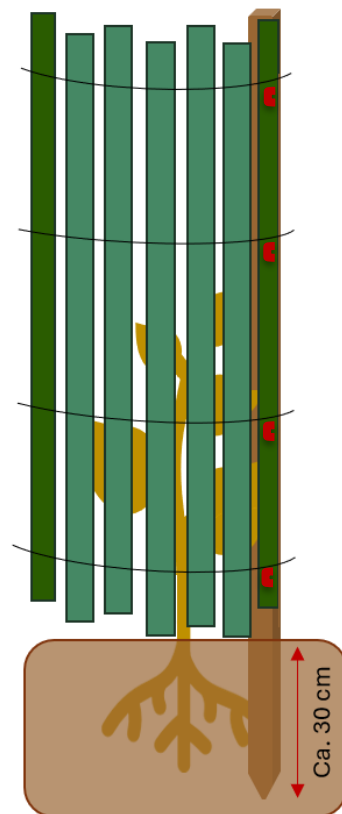


1. Attaching the first outer veneer

-  > fix the 1st outer veneer with clamps

2. Attaching the second outer veneer

- (> guide the wires towards each other
-  > tree is centered in the growth cover
-  > fix the 2nd outer veneer with clamps

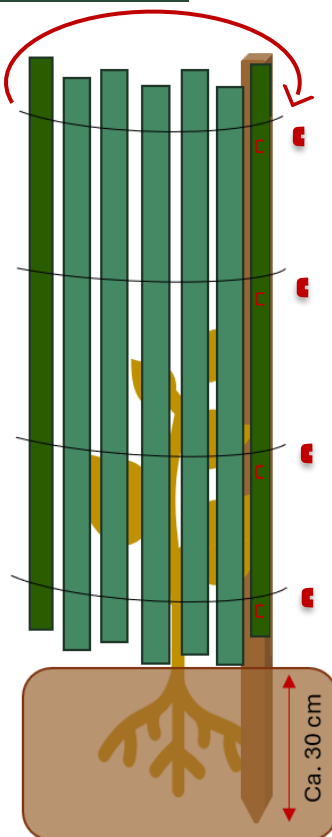

Make sure that

- the clamps are placed at least at the height of each wire
- the clamps are placed across the wood grain and lie flush, don't protrude and don't penetrate too deeply into the wood
- the wire isn't stapled on so that it can later fall to the ground and rot

WOODINI Holzprodukte GmbH

Gürtel 21, A-3270 Scheibbs, Telefon +43 (0) 7482 46433, e-mail: info@woodini.com, www.woodini.com

Raiffeisenbank Mittleres Mostviertel – IBAN: AT93 3293 9000 0051 9066, BIC: RLNWATWW939

Sparkasse Scheibbs AG – IBAN: AT38 2025 7000 0001 8150, BIC: SPSBAT21XXX

Firmenbuchgericht St. Pölten, FN 237826w, ATU 57291335